



Model No: A7160


User “Manual & Warranty”

SAFETY INSTRUCTIONS



1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry and soft cloth.
7. Do not block any ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched at the outlets and the exit point.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Only connect to the correct type of household power supply and wall outlets that match the adaptor included.
12. Do not overload wall outlets or extension cords as this can result in a risk of fire or electric shock.
13. Never push objects of any kind or spill liquid into the product as this could result in a risk of fire or electric shock.
14. Only use attachments/accessories specified by the manufacturer.
15. Refer all servicing issues to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
16. This equipment might cause TV or radio interference even when it is operating properly. To eliminate interference you can try one or more of the following corrective measures:
 - Reorient or relocate the receiving antenna.
 - Increase the distance between the equipment and the radio or TV.
 - Use outlets on different electrical circuits for the equipment and the radio or TV.
 - Consult your dealer or an experienced radio/television technician if the problem still exists.


Assembly Illustration

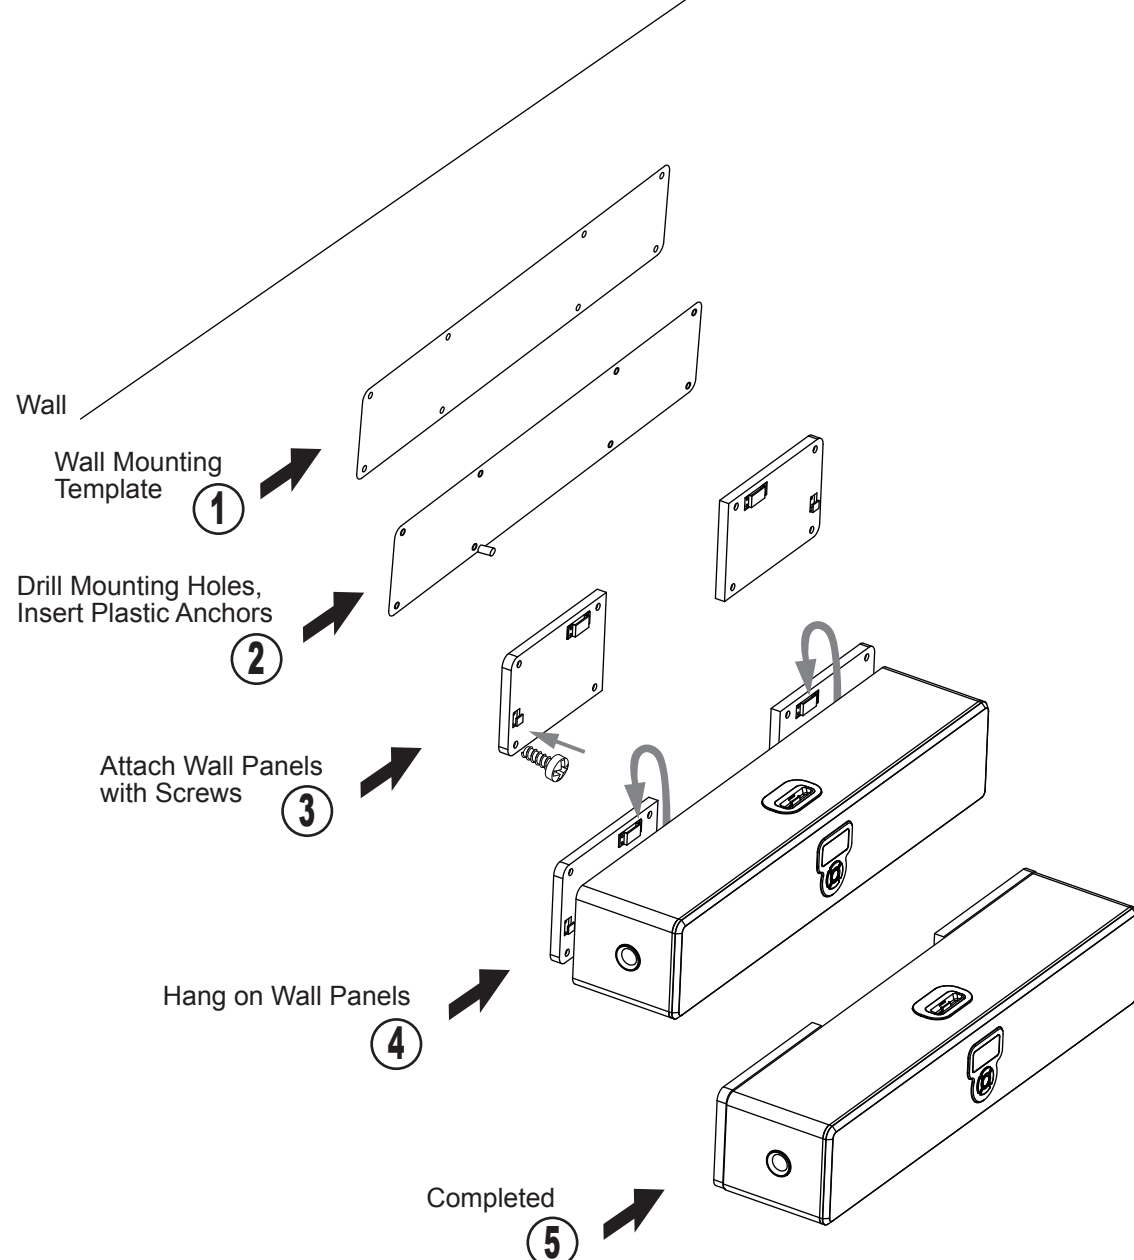


- ① Use the included wall mounting template to determine locations for mounting screws.
- ② Drill mounting holes and insert included plastic anchors
- ③ Attach the left and right wall mounting panels with the included screws
- ④ Hang the main unit on the wall mounting panels
- ⑤ Assembly process is completed

CONTROLS AND INDICATORS


FRONT CONTROL PANEL

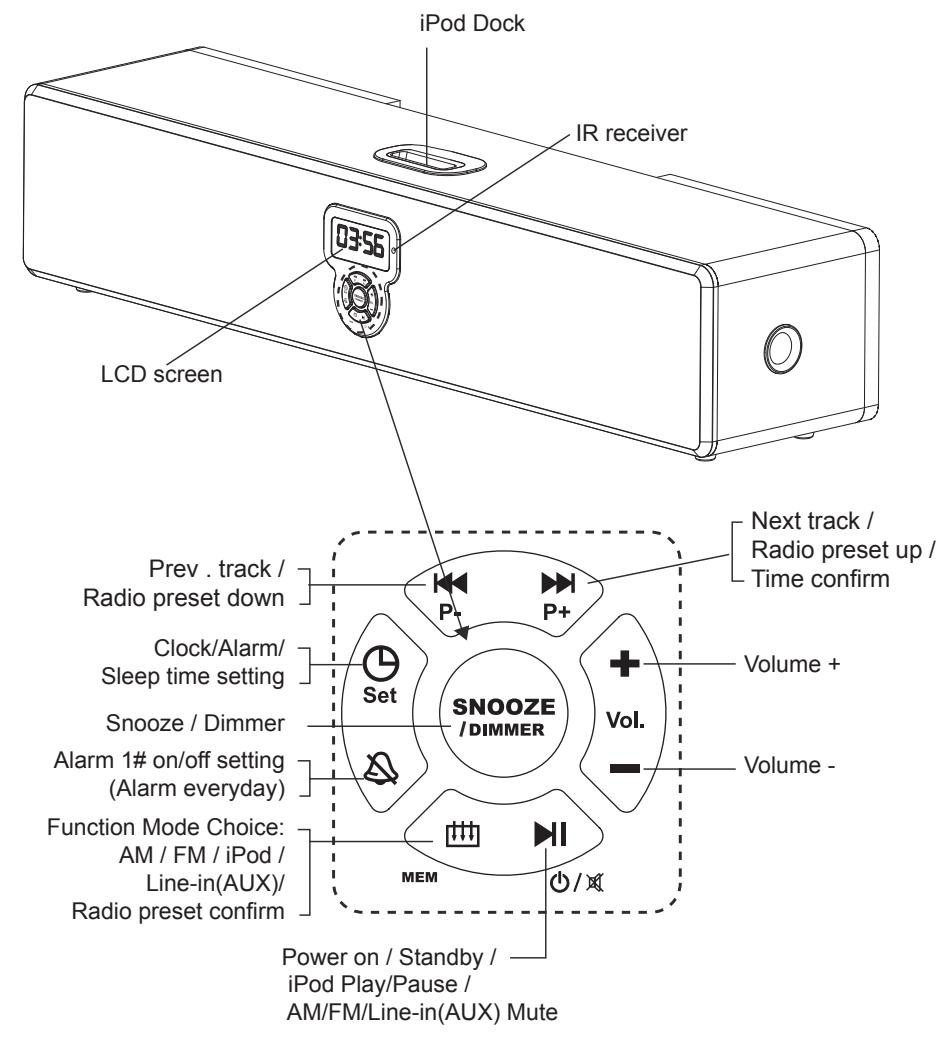

LCD DISPLAY

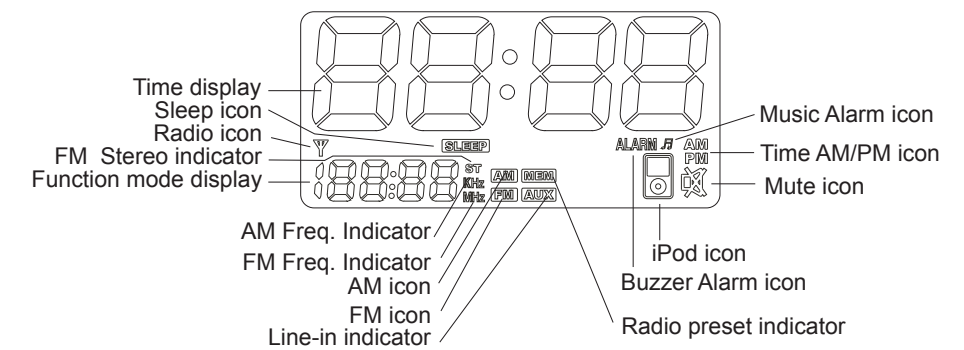


REMOTE CONTROL

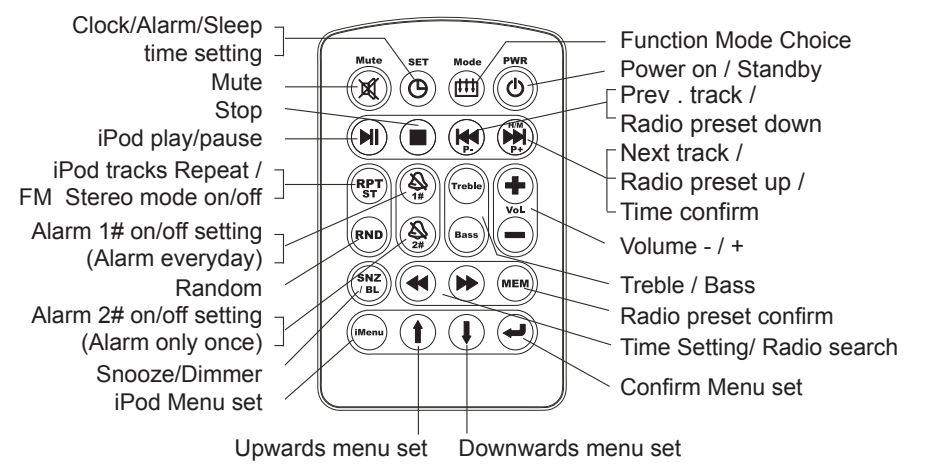


Notes:
Please remove the plastic strip from the battery compartment of the remote before use. (Remote will not function while the plastic strip is in place).


REAR PANEL

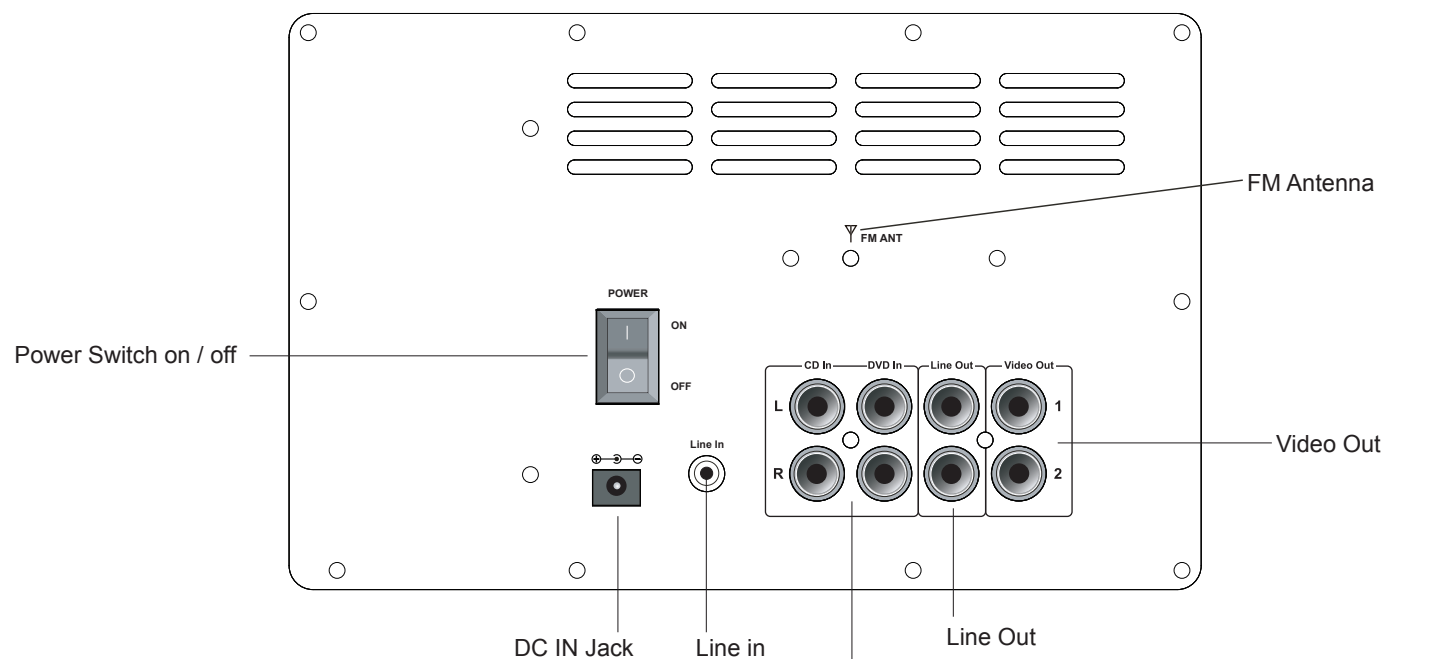


1. POWER SUPPLY

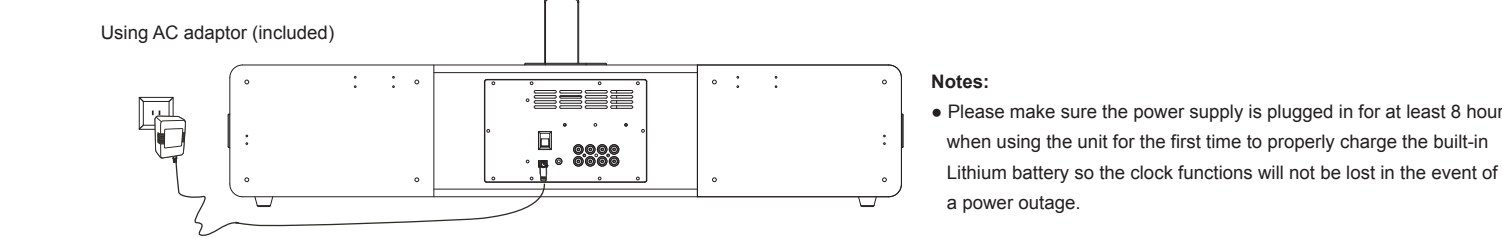


2. Power off / Standby / Power on

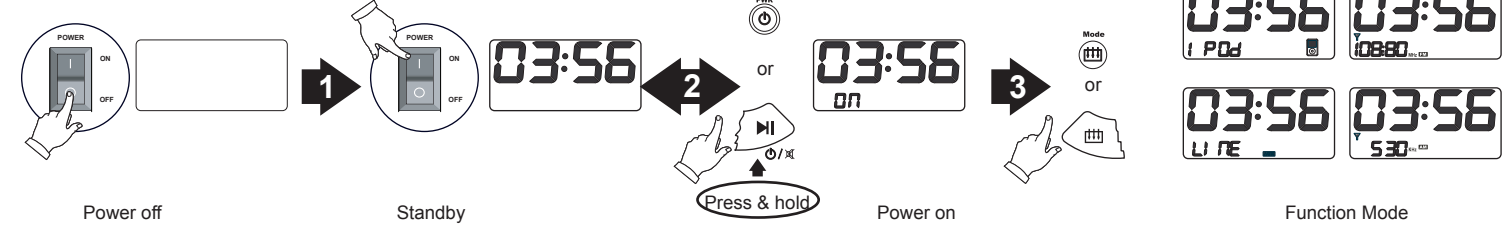


3. Enjoy your iPod — iPod Mode

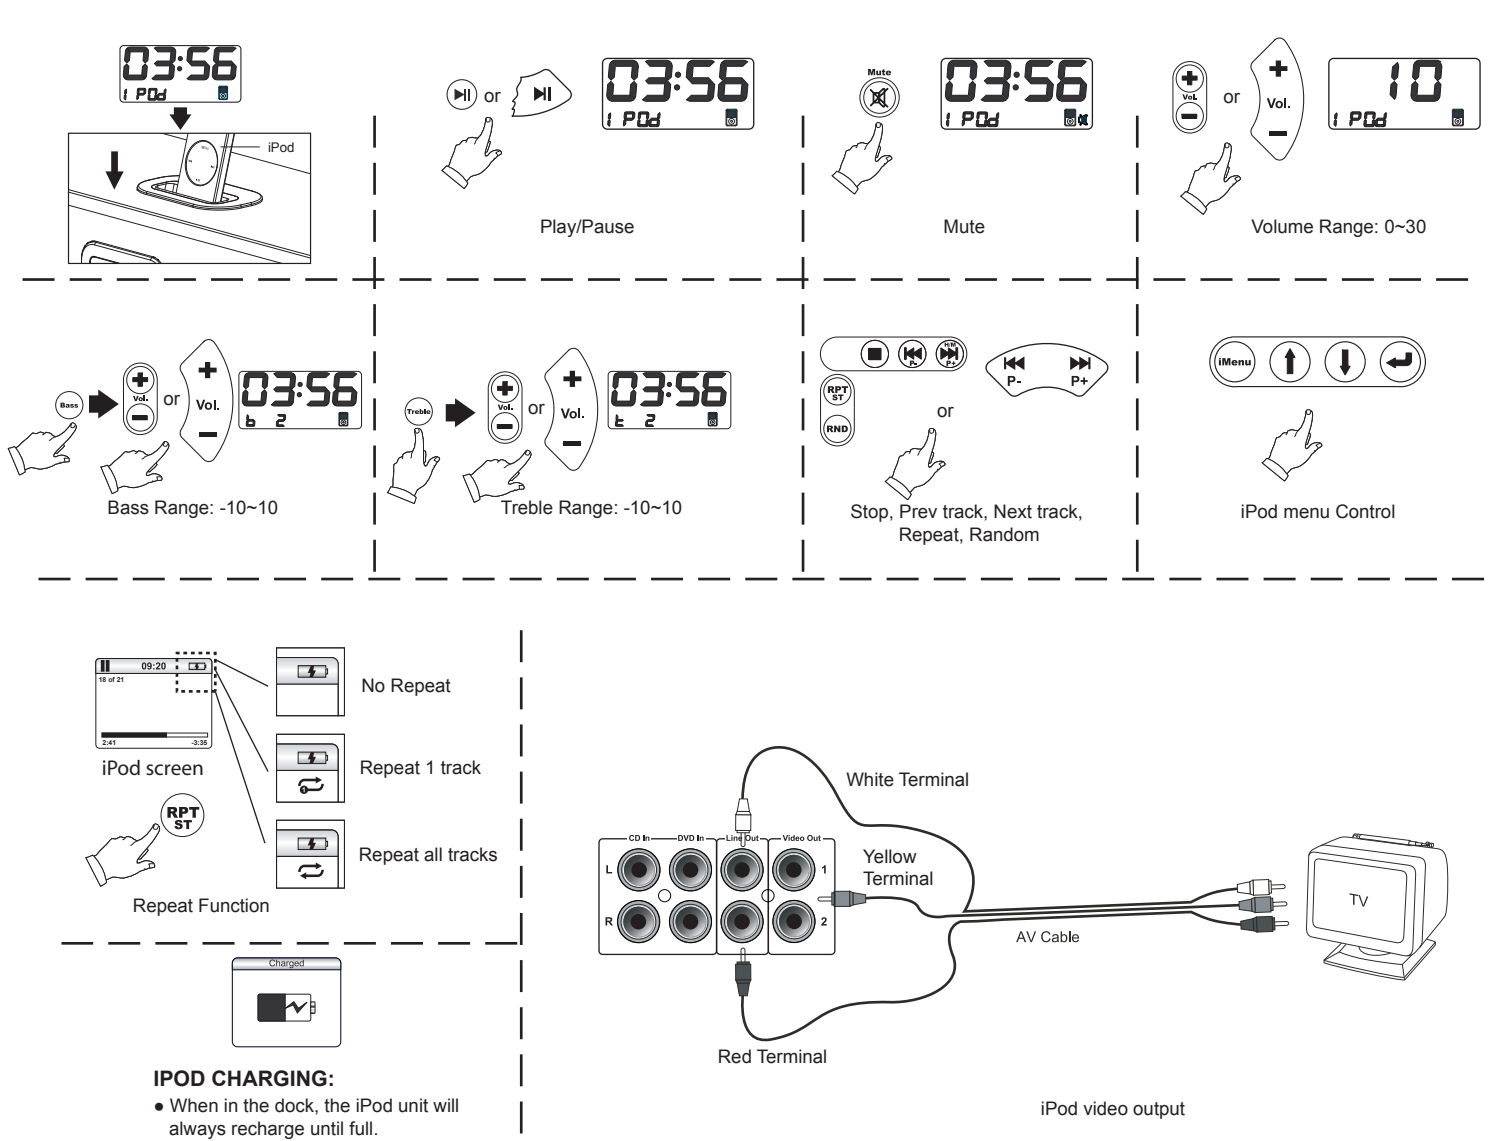


4. LISTENING TO AM/FM RADIO

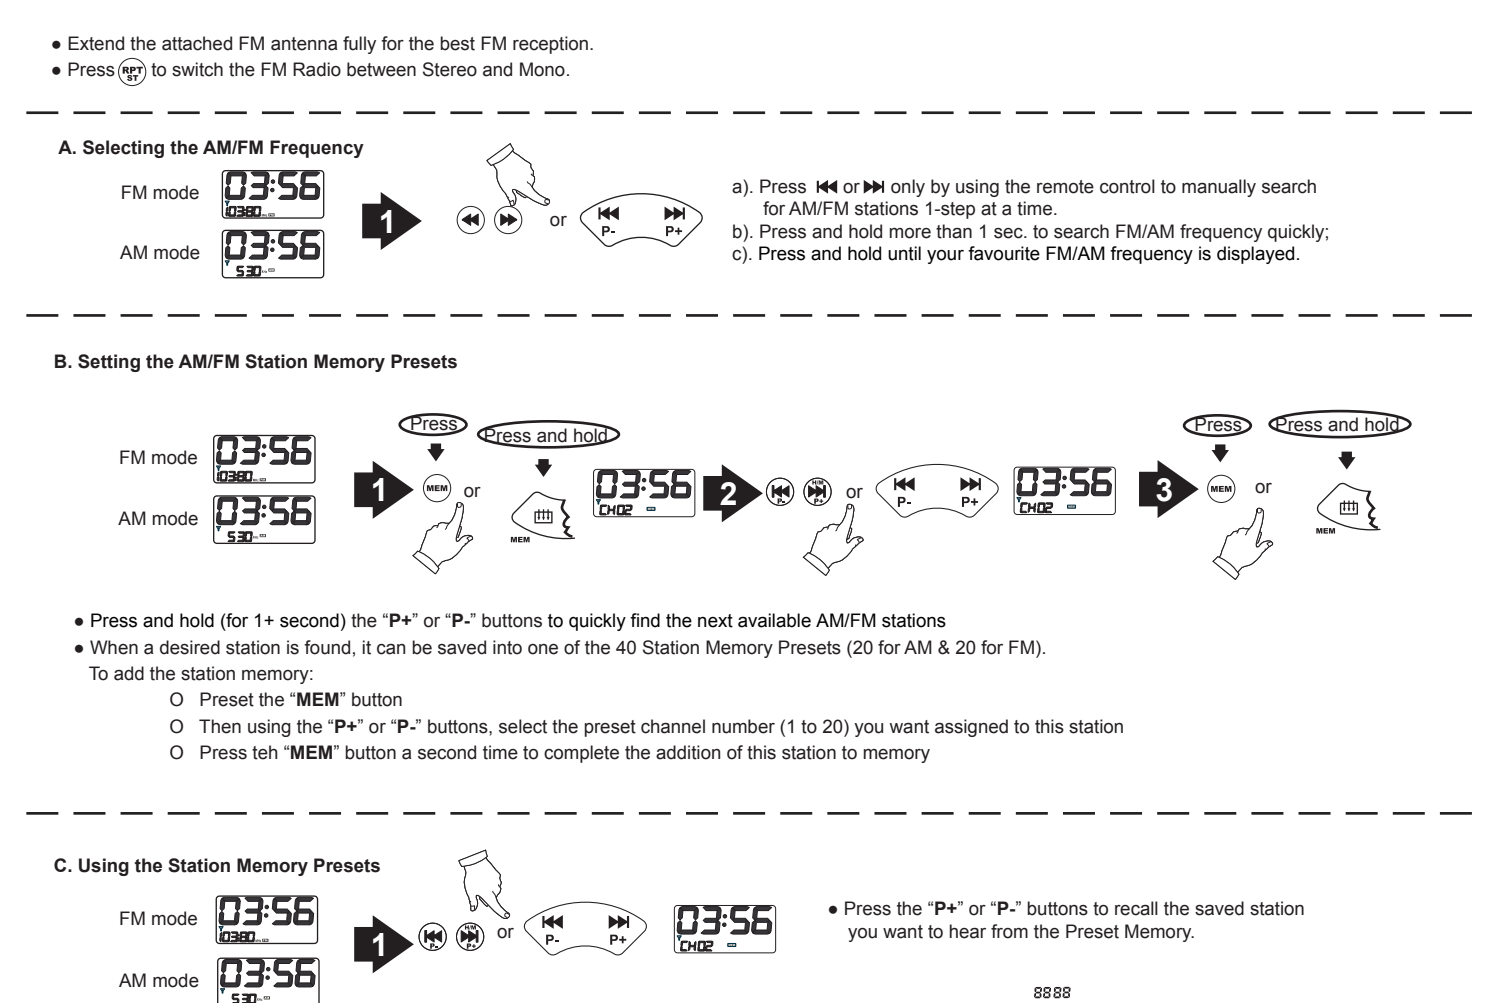


5. Connecting another Audio Device, Line-in (AUX) Mode or with 3.5mm In-put Jack.

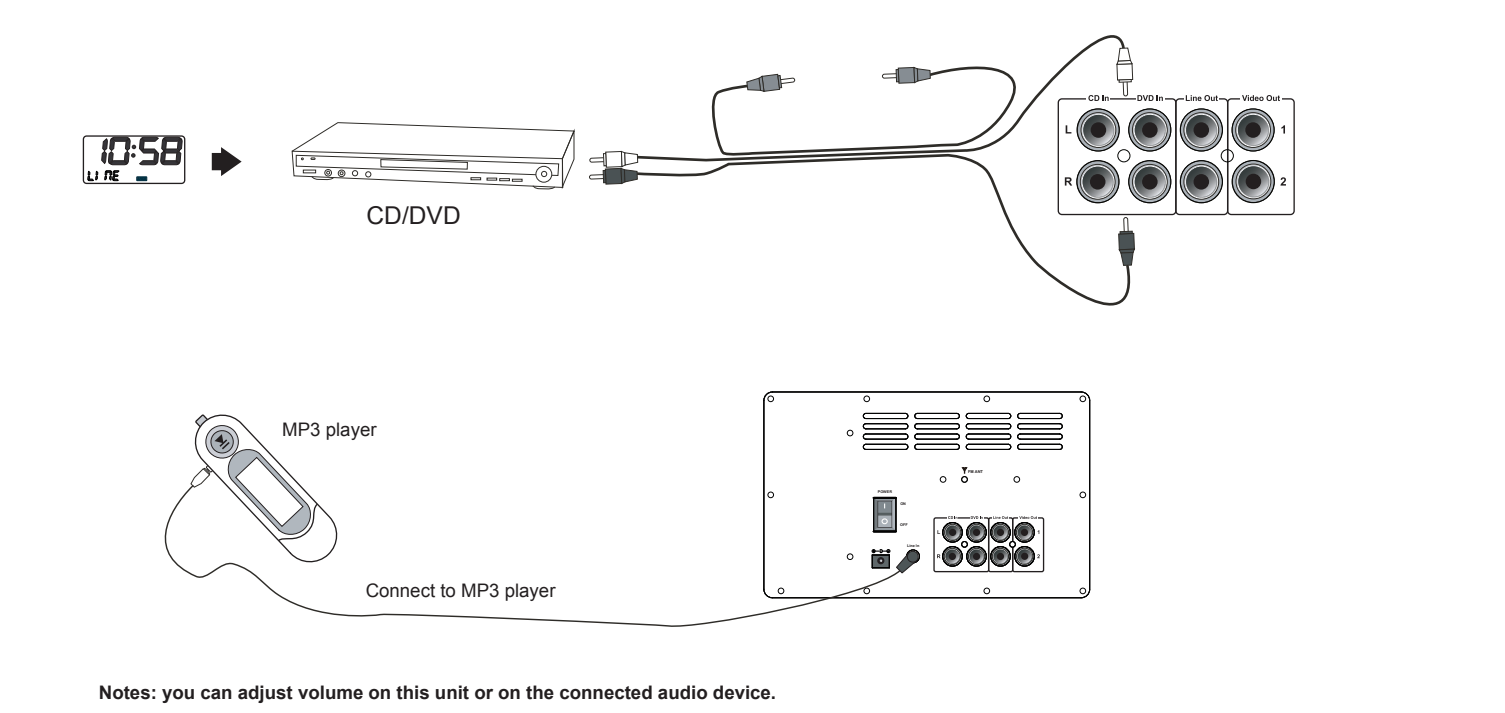

6. Setting the Time

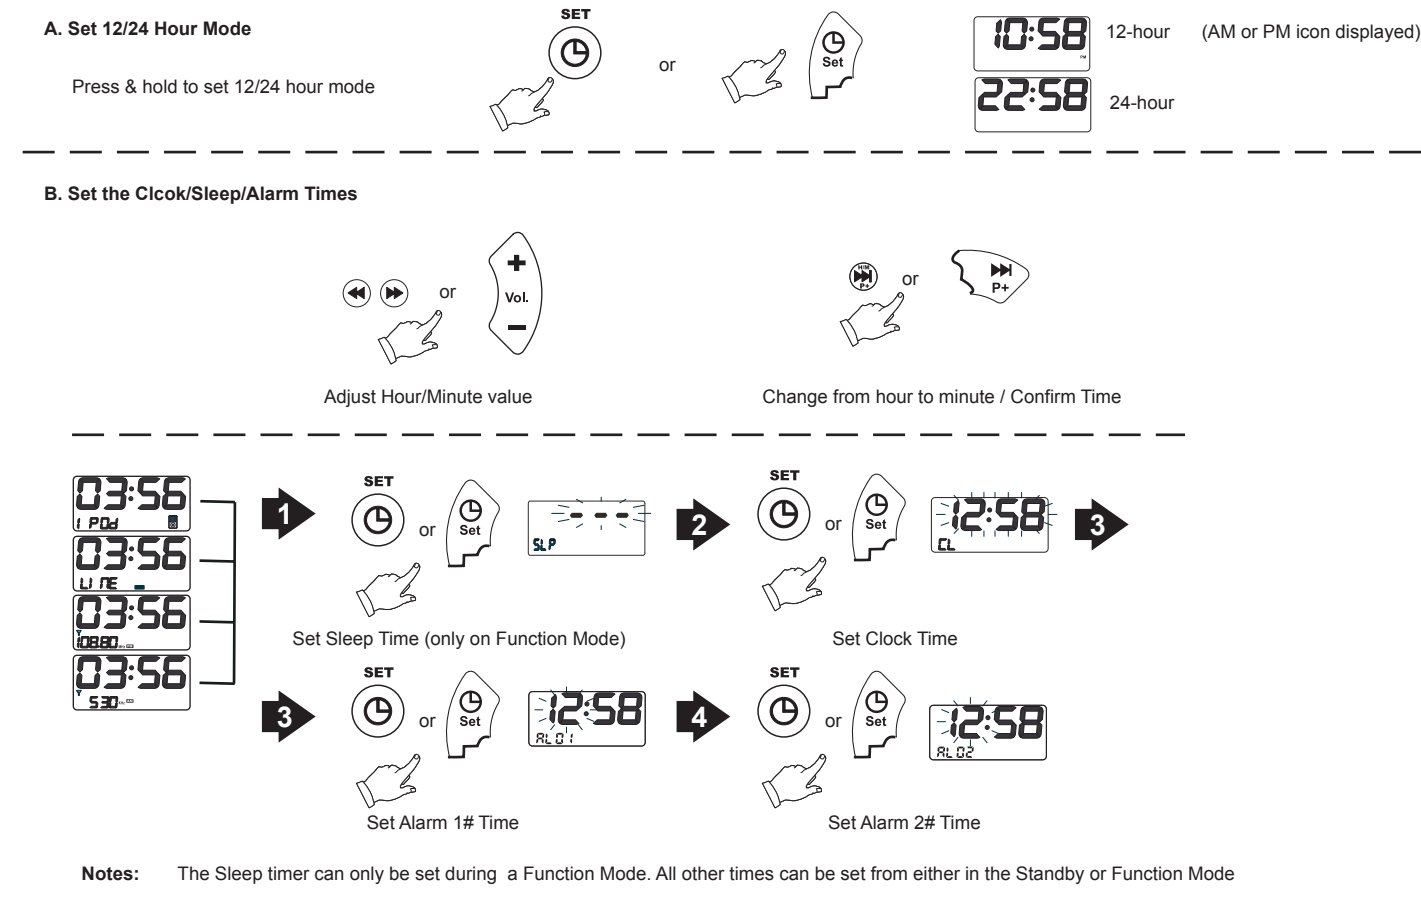

7. SETTING THE ALARM: BUZZER ALARM- MUSIC ALARM- ALARM OFF

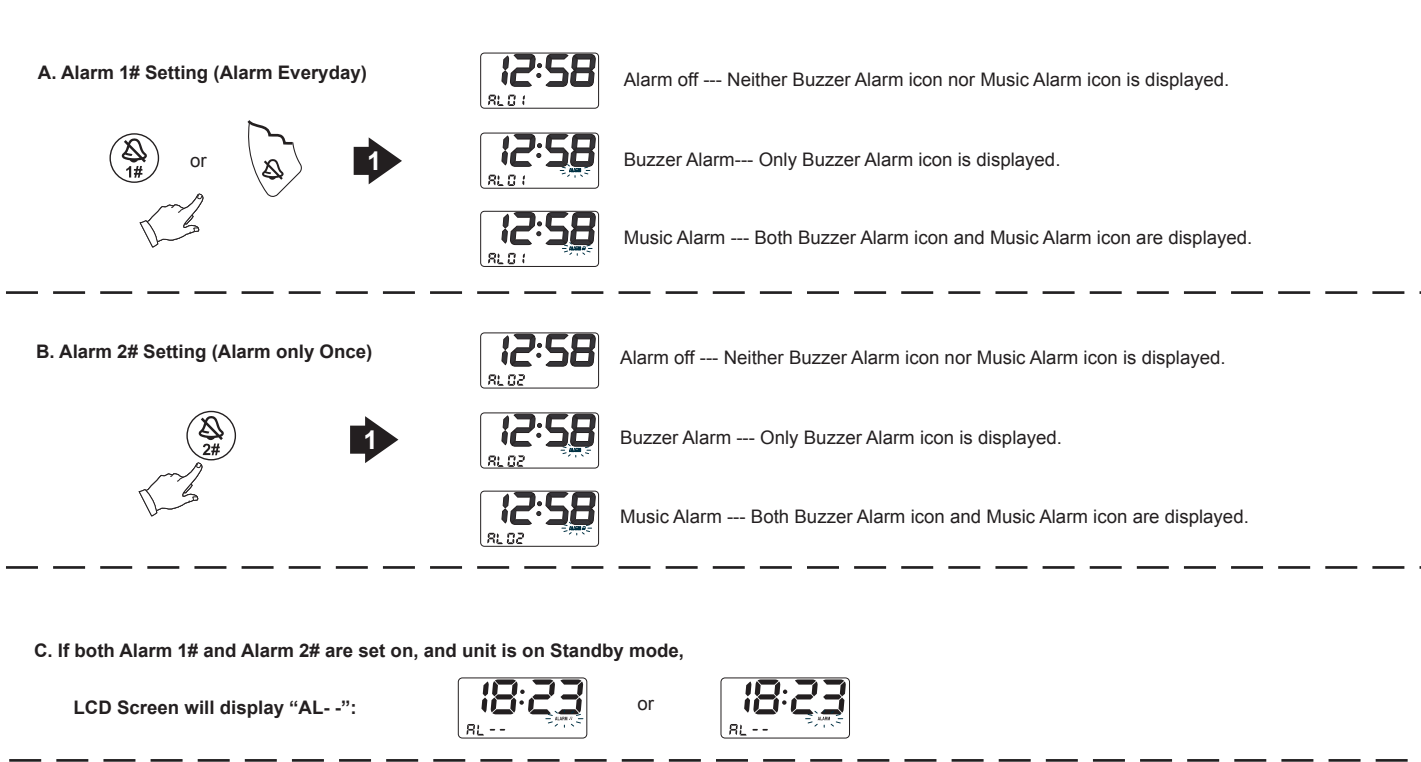


Notes:

To place the unit on **STANDBY**, press either the **POWER** button on the Remote Control or the **POWER** button below the LCD Display Panel


- (1) The audio input source for the Music Alarm is determined by the last Music Function Mode used (iPod mode, Line-in mode, AM/FM mode) before selecting "Standby"
- (2) The Music Alarm function features an alarm that gradually increases in volume. The unit will automatically turn on at the preset Alarm time.
- (3) Buzzer Alarm can be enabled from a Function or Standby mode. The Music Alarm is only enabled when the unit is on Standby mode.

8. SNOOZE / DIMMER SETTING

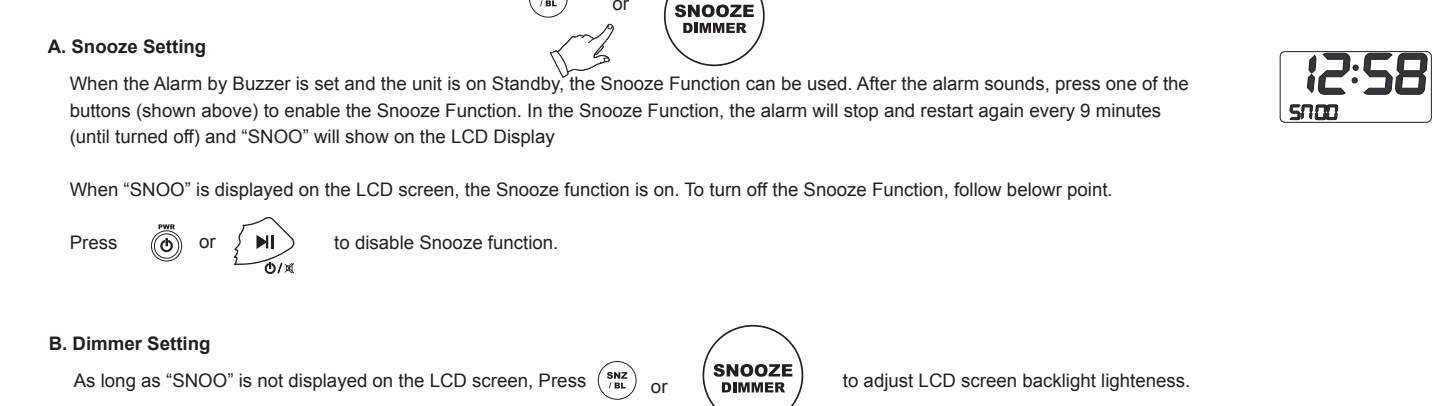

9. Maintenance

- Use a soft, clean cloth moistened with plain, luke warm water to clean the exterior of the unit.
- Never use solvents such as benzene or other strong chemical cleaners since these could damage the unit's finish.
- It is important that no liquid reaches the inside of the unit.
- Replace remote battery with anode up from back-side.

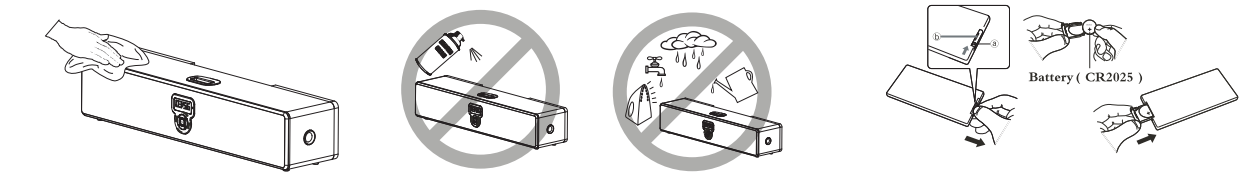

10. Troubleshooting

Symptom	Possible Problem	Solution
No sound is heard	Power is not on iPod is not working iPod not connected correctly The plastic strip of remote is not removed	Press Power button Unplug iPod and test iPod Make sure iPod is plugged correctly Remove the plastic strip
Wireless remote not work	Remote battery is weak Remote is not pointed towards the IR receiver of the unit	Replace battery Point the remote towards the IR receiver of the unit
Radio noisy	The antenna is placed in a weak radio signal place or direction	Move or rotate the antenna to improve the radio effect
Sound distortion	Music overload, Sound is too loud	Decrease the volume
Please switch off the power and turn it on again if the unit cannot work normally		

11. Package Contents

- Main Unit
- AC Adaptor
- Remote Control with 1-"CR2025" Battery
- AV Cable
- 3.5mm Audio Cable
- User "Manual & Warranty"
- Left and Right Wall Mounting Panels
- Wall Mounting Screws
- Wall Mounting Template

ETEC LIMITED 90-DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a 90-day period after purchase. We will repair or replace the unit free of charge should it become defective under this warranty, providing you submit proof of purchase (sales slip) along with the unit and all accessories.

During the initial 90-day period after original purchase, we will service or exchange, at no charge. To obtain warranty service or replacement within the duration of the 90-day warranty, return the product **freight prepaid** to the address below.

ETEC USA
823 Old Settlers Trail
Suite 100
Hopkins, Minnesota 55343

Please enclose a copy of the sales receipt with the date of purchase and provide a detailed description of the problem. Failure to enclose required information will result in delay of your shipment. Please allow 4-6 weeks for product service or replacement.

This warranty does not cover any product, which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to external devices such as speakers and other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair. Under no circumstances shall ETEC USA, be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL ETEC USA BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured units, or product sold 'As Is'.
This warranty is valid only in the United States and grants specific legal rights.